

Elfa Easy Glider

Installation instructions

Ideal for use inside cupboards and cabinets or on shelves, Elfa Easy Glider combines a glide-out runner with a mesh or wire drawer.

To create an Elfa Easy Glider pull-out drawer you require:

Elfa Easy Glider Runner System 35

W30 x D40 x H3cm

+

Elfa Drawer System 35 Mesh or Wire Drawer

3 Height options

1 Runner: W32.7 x D52.7 x H8.5cm

2 Runner: W32.7 x D52.7 x H18.5cm

3 Runner: W32.7 x D52.7 x H28.5cm

Elfa Easy Glider Runner System 45

W40 x D40 x H3cm

+


Elfa Drawer System 45 Mesh or Wire Drawer

3 Height options

1 Runner: W42.7 x D52.7 x H8.5cm

2 Runner: W42.7 x D52.7 x H18.5cm

3 Runner: W42.7 x D52.7 x H28.5cm

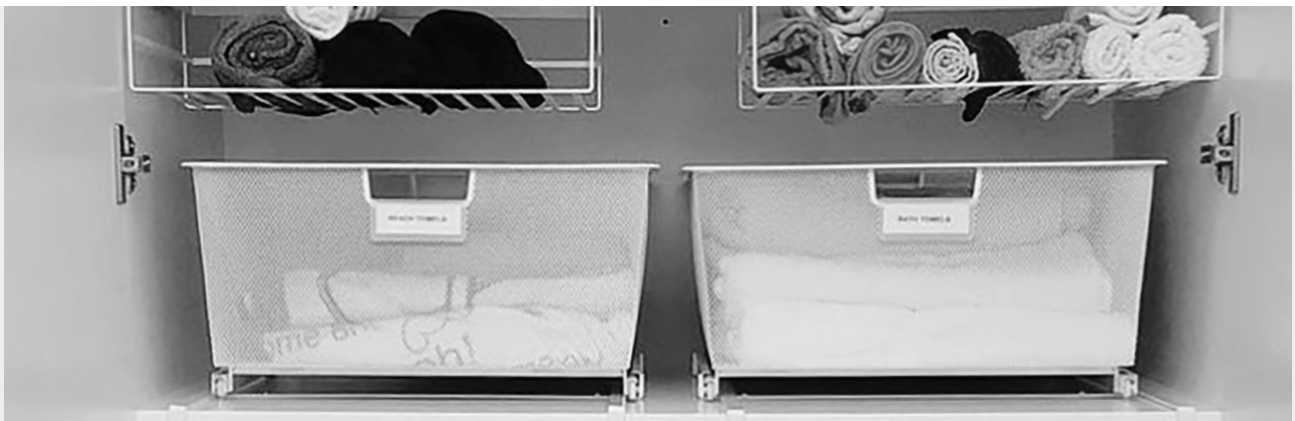

You need the following to assemble your solution:

- Screwdriver
- Drill with 3mm drill bit



1. Place the frame in the cabinet, making sure it is positioned so the frame pulls out towards you.



2. Mark the holes on the bottom frame with a pencil. Remove the frame and drill the marked holes with a 3mm drill bit. Drill just enough to break the surface.



3. Place the frame back in position and secure it with the screws provided in the pack.



4. Make sure the drawer is centred to the frame. Snap on the clips provided to secure the drawer to the frame.